 


A3145 SoundCore Boost Firmware Update Instructions

Step 1: Download the update tool and product firmware.

For Windows:

 
1) Download the update tool from the Anker website, unzip it, then double-click “setup.exe” and follow the default installation instructions.



2) Download the firmware (for A3145 SoundCore Boost), unzip it, and save it to the desktop.

For macOS:

1) Download the update tool from the Anker website, unzip it, then double-click “AnkerUpgradingTool 1.01.dmg” and follow the default installation instructions.



2) Download the firmware (for A3145 SoundCore Boost), unzip it, and save it to the desktop.

Step 2: Double-click the “Anker” or “AnkerProduct” icon on the desktop.

Note: If a Mac pop-up prompt says it cannot open the AnkerProduct program because it is from an unidentified developer, go to "Settings", open the "Security and Privacy" interface, and allow AnkerProduct to run.

 


Windows icon




AnkerProduct

Mac icon

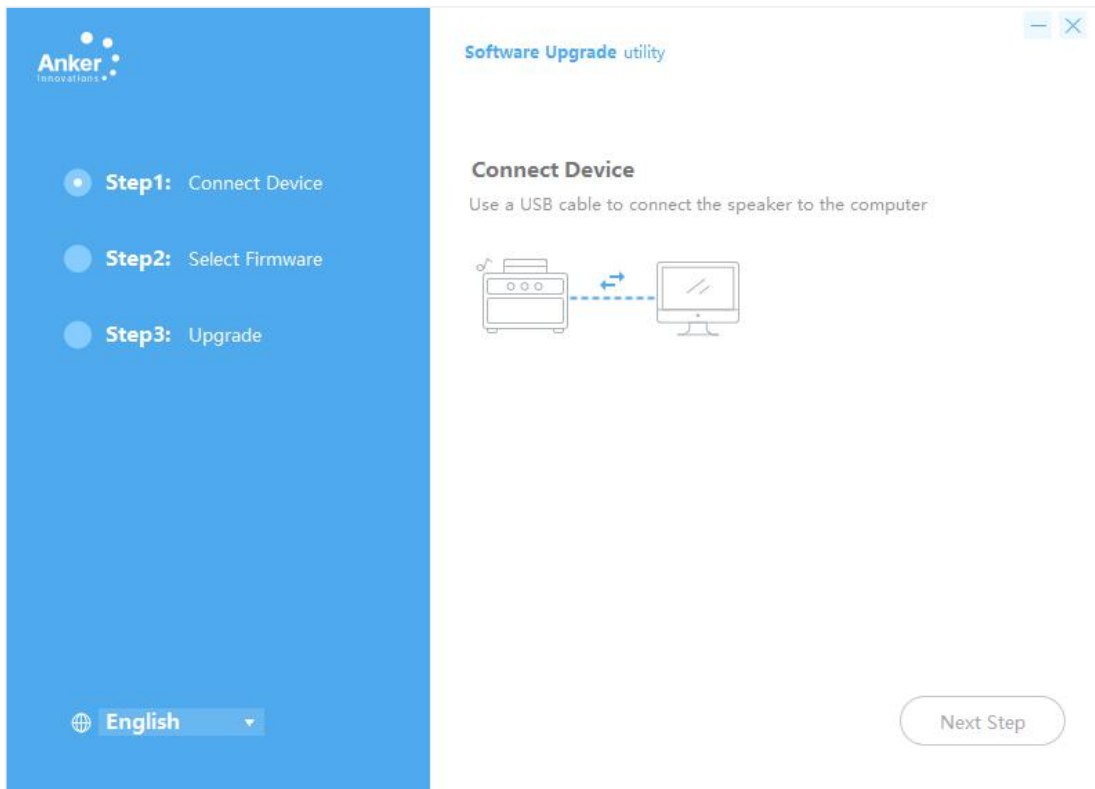


Step 3:

 - A) Plug the USB charging cable into your computer.
- B) Turn off SoundCore Boost.
- C) Press and hold down the "Volume +" and "Volume -" buttons simultaneously.
- D) Connect the USB charging cable to your SoundCore Boost.
- E) When the update tool interface says "connected", release the "Volume +" and "Volume -" buttons, and click "next step."

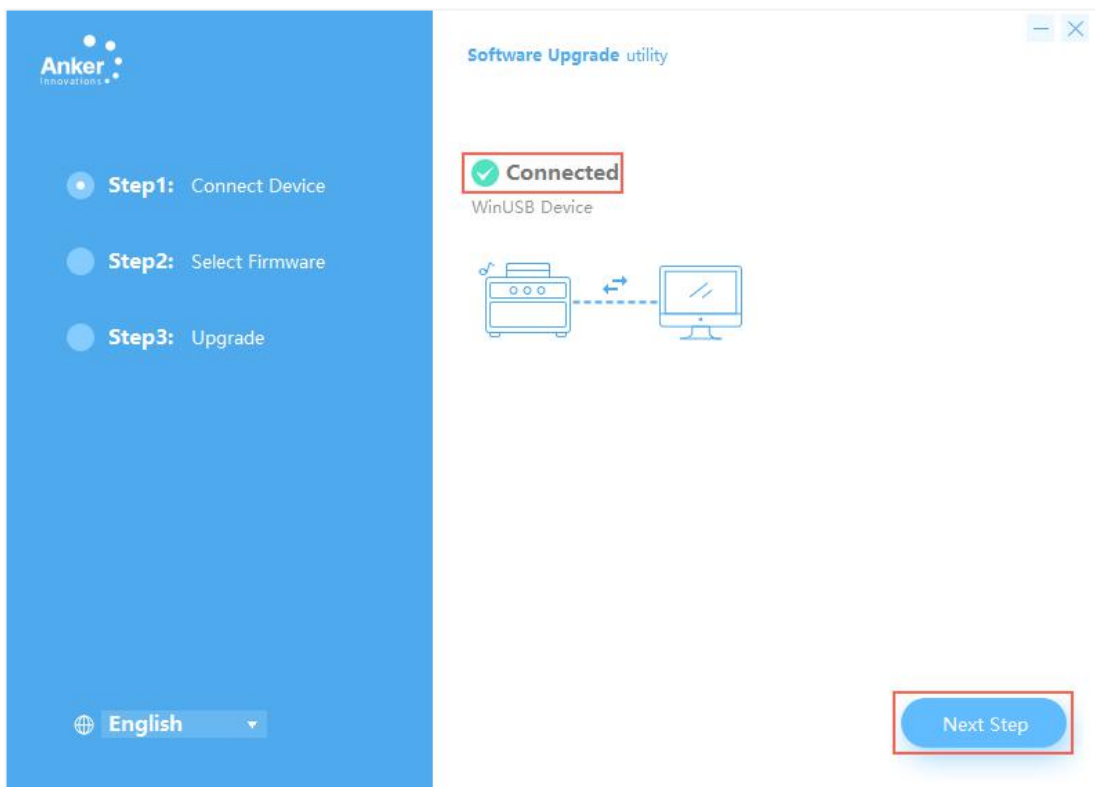


 
Step 4: Click the “Choose” button and select ”A3145 firmware,” then click “next step”.

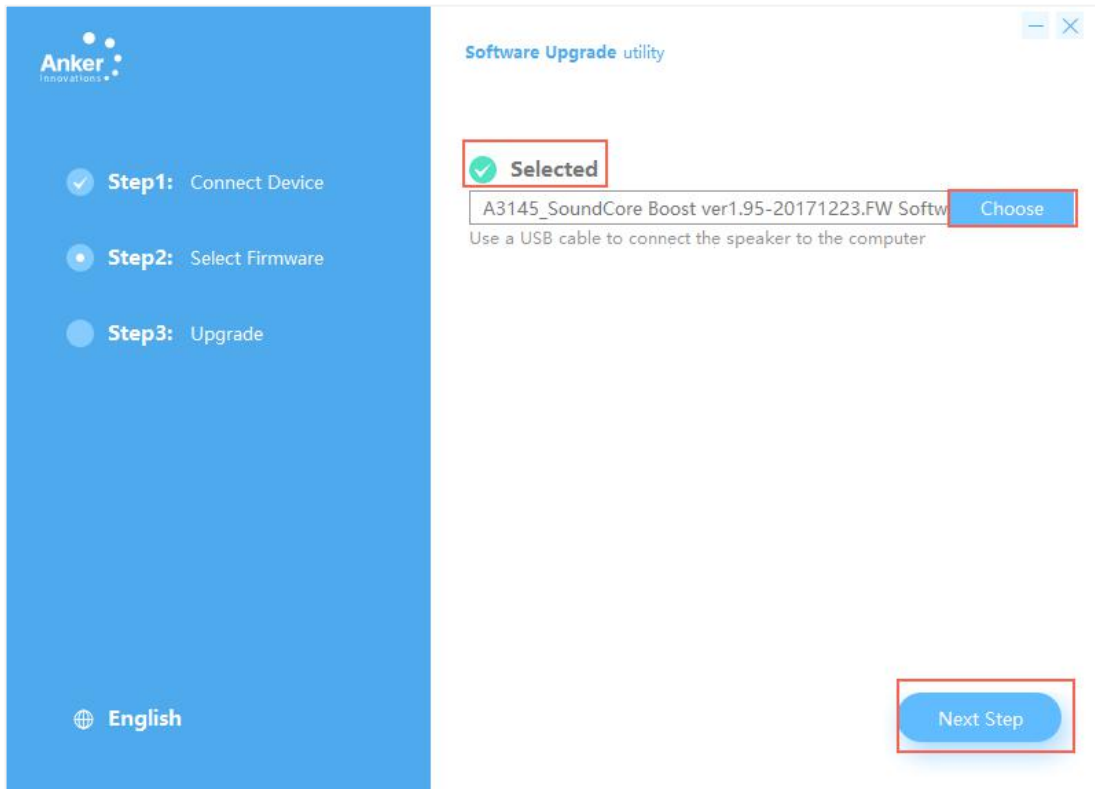

Step 5: When the progress bar is full, the upgrade is successful. SoundCore Boost will turn on automatically in a few seconds.

Notes:

  - 1) Do not unplug the USB charging cable or press any buttons on the speaker while the upgrade is in process.
- 2) Hold down the power button for 10 seconds if the speaker seems stuck in the upgrade process.

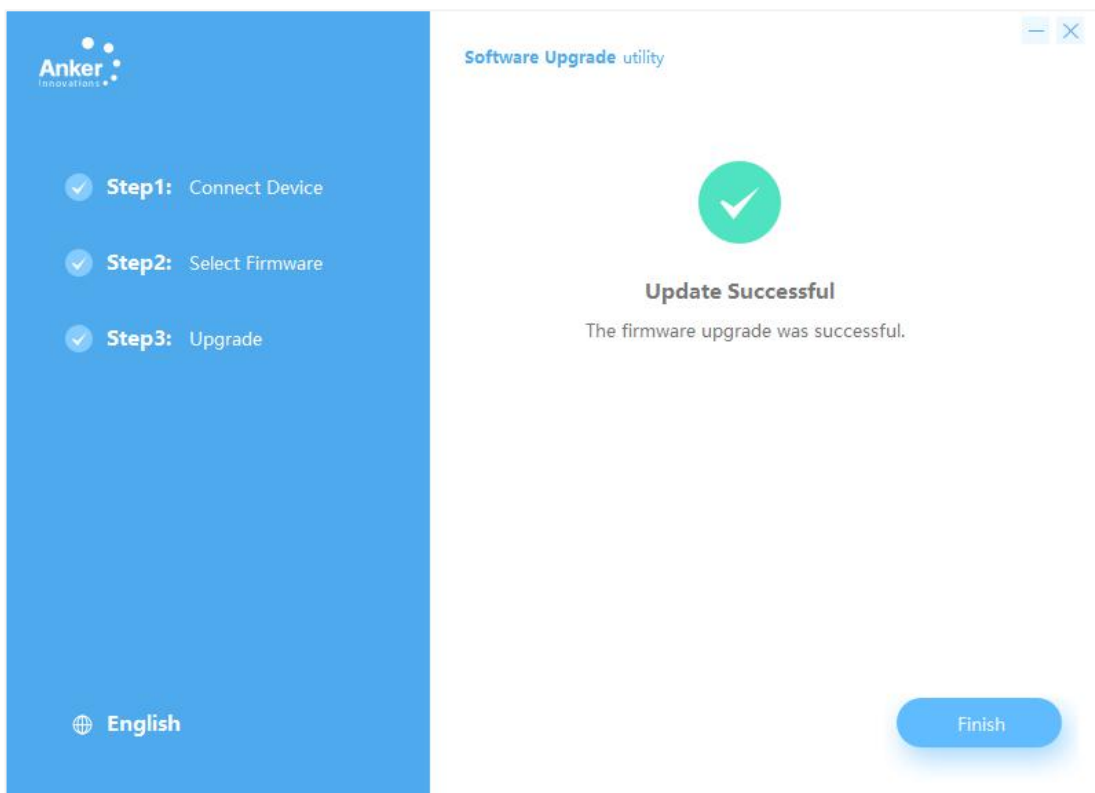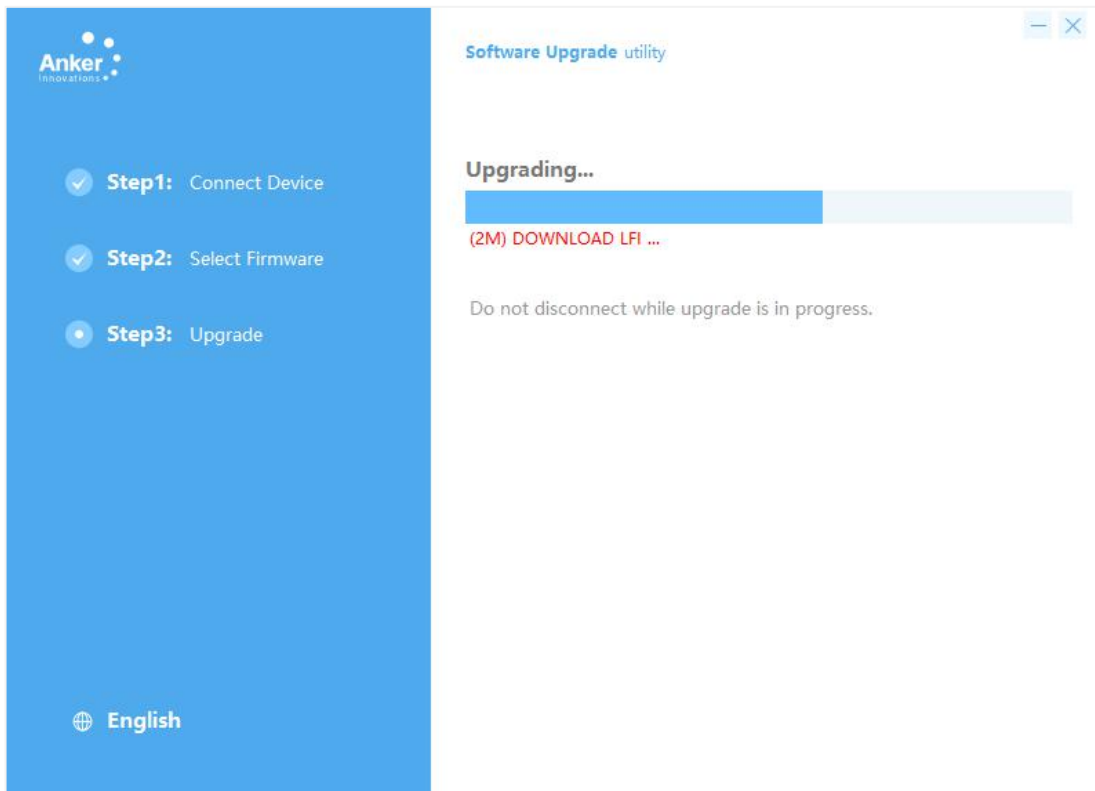

Step 6: Press and hold down the “Volume +,” “Volume -,” and “BassUp” buttons to exit upgrade mode.