

## Welcome Guide


Selfie Stick with Tripod

### Using Your Selfie Stick

#### 1. Bluetooth pairing

Press the camera button for 3 seconds until the blue light begins flashing. With your phone or camera, search for the "Anker A7163" Bluetooth device and pair. The blue light will remain steady once pairing is complete.


To turn off Bluetooth, press the camera button for 3 seconds.

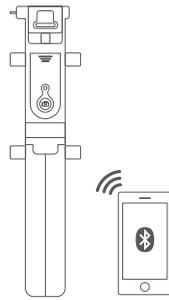

▶ 1


#### 2. Opening the phone holder

Flip the phone holder up and rotate it to the horizontal position, relative to the camera button.

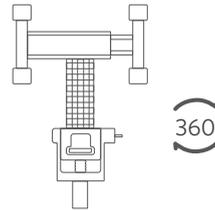

#### 3. Placing your phone

Place your phone in the holder and adjust the sides for a secure fit.

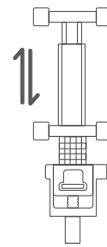


▶ 2

#### 4. Taking a photo


Press the camera button on the selfie stick to take a photo.

If this does not work, go into your phone's settings and enable the option to take a photo with the volume button.

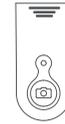

#### 5. Placing your GoPro


Loosen the screw on the right side of the phone holder, then flip it over so that the GoPro holder is in the appropriate position.

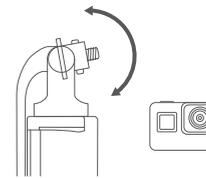

▶ 3

#### 6. Using the tripod

Open the tripod legs at the bottom of the selfie stick, and place on a flat surface. Remove the camera button remote.

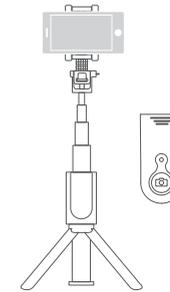

▶ 4



### Attention

- To preserve battery lifespan, use and recharge at least once every 4 months
- Use original or certified cables
- Don't expose to liquids
- Don't disassemble
- Avoid dropping
- Avoid extreme temperatures

Ensure your phone and the cradle are fully secure before use.

▶ 5

### Specifications

Size (when retracted)	195 × 46 × 27 mm / 7.7 × 1.8 × 1.1 in
Length max (when extended)	605 mm / 23.8 in
Weight	155 g / 5 oz
Input	5V / 0.1A
Battery Life	20 h

#### Declaration of Conformity

Hereby, Anker Innovations Limited (or Anker Technology Co., Limited) declares that the product type A7163 is in compliance with Directive 2014/53/EU.

▶ 6

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

#### RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

▶ 7

### Customer Service

- 18-month limited warranty
- Lifetime technical support

We hope you never have the need, but if you do, our service is friendly and hassle-free.

[customersupport@anker.com](mailto:customersupport@anker.com)

1-800-988-7973 | Mon-Fri 9:00-5:00 PST (US)  
44(0)1604 936200 Mon-Fri 6:00-11:00(GMT)  
49(0)69 9579 7960 Mon-Fri 6:00-11:00(DE)  
86 400 0550 036 周一至周五 9:00-17:30(中国)  
81 03 4455 7823 月-金 9:00-17:00(日本)

▶ 8