 


A3107 Soundcore mini 2 Firmware Update Instructions

Step 1: Download the update tool and product firmware.

A) Download the update tool from the Soundcore website, unzip it, then double-click “setup.exe” and follow the default installation instructions.

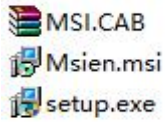 


B) Download the firmware (for Soundcore mini 2), unzip it, and save it to the desktop.

Step 2: Double-click the “Anker” icon on the desktop.

 


Windows icon

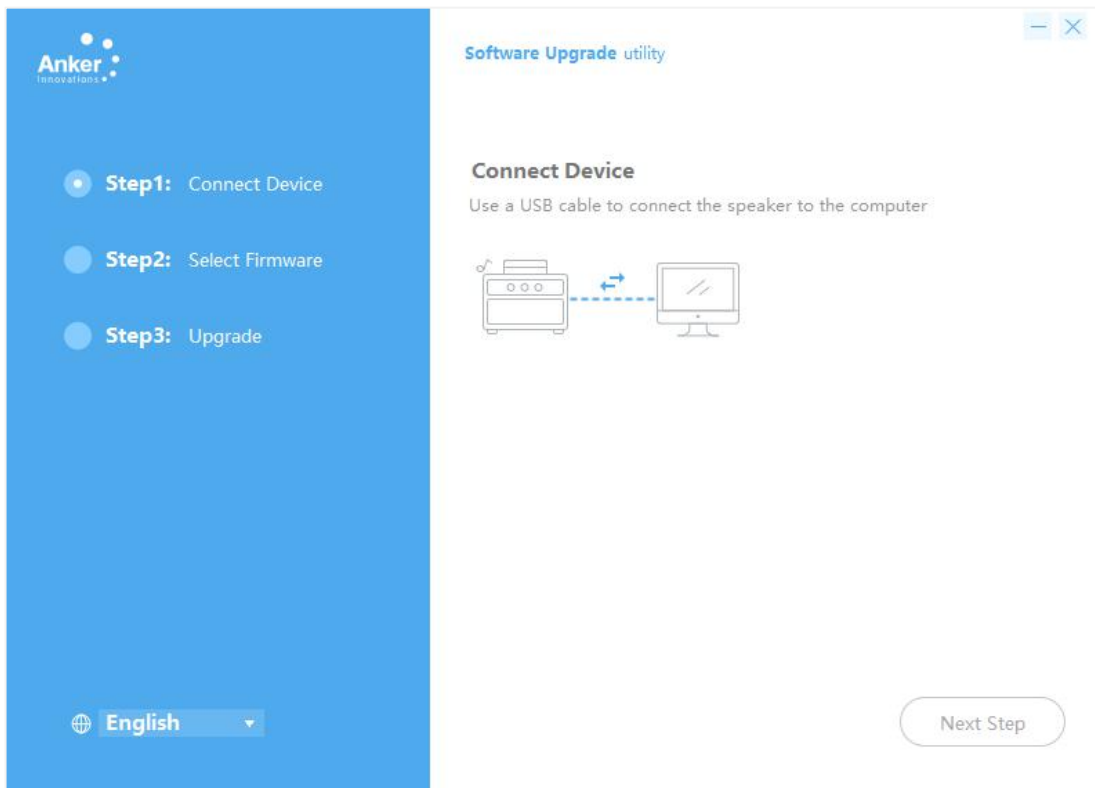 


Step 3:

- A) Plug the USB charging cable into your computer.
- B) Turn off Soundcore mini 2.
- C) Press and hold the “Volume +” and “Volume -” buttons simultaneously.
- D) Connect the USB charging cable to your Soundcore mini 2.
- E) Press the “Power” button for 1 second.
- F) Release the “Volume +” button while the white power indicator is off, and the update client will display “connected.”
- G) Click “Next Step.”

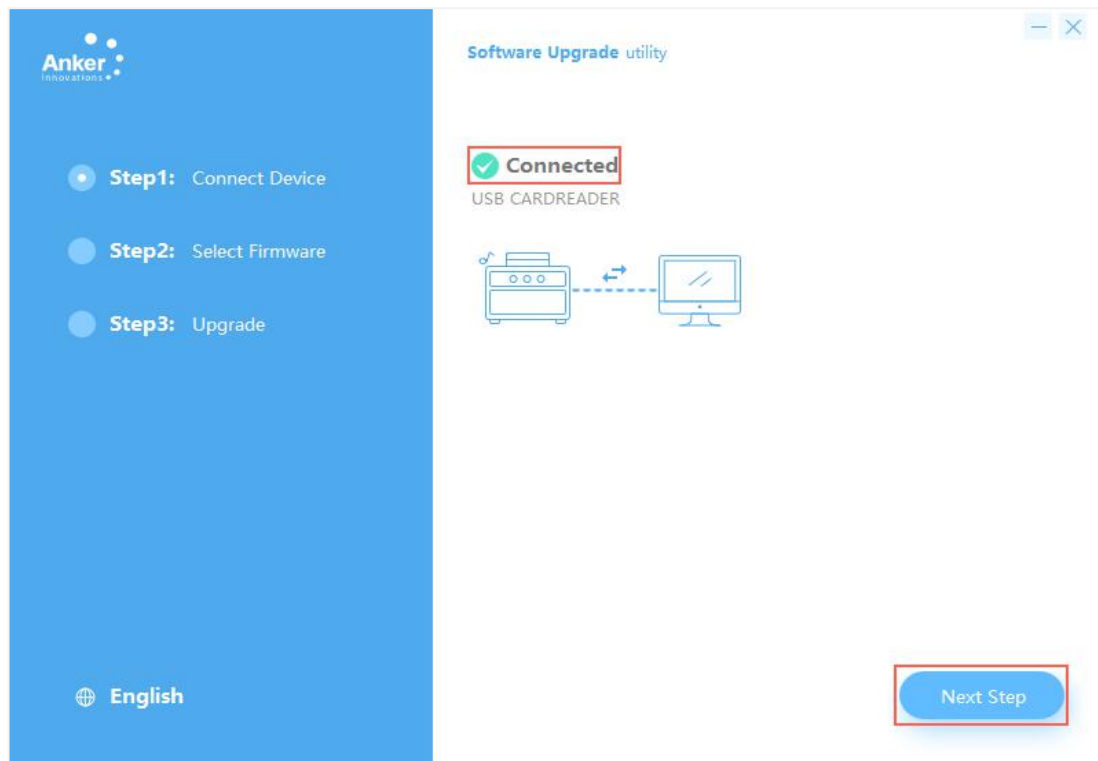

Step 4: Click the “Choose” button and select “A3107 firmware,” then click “Next Step.”

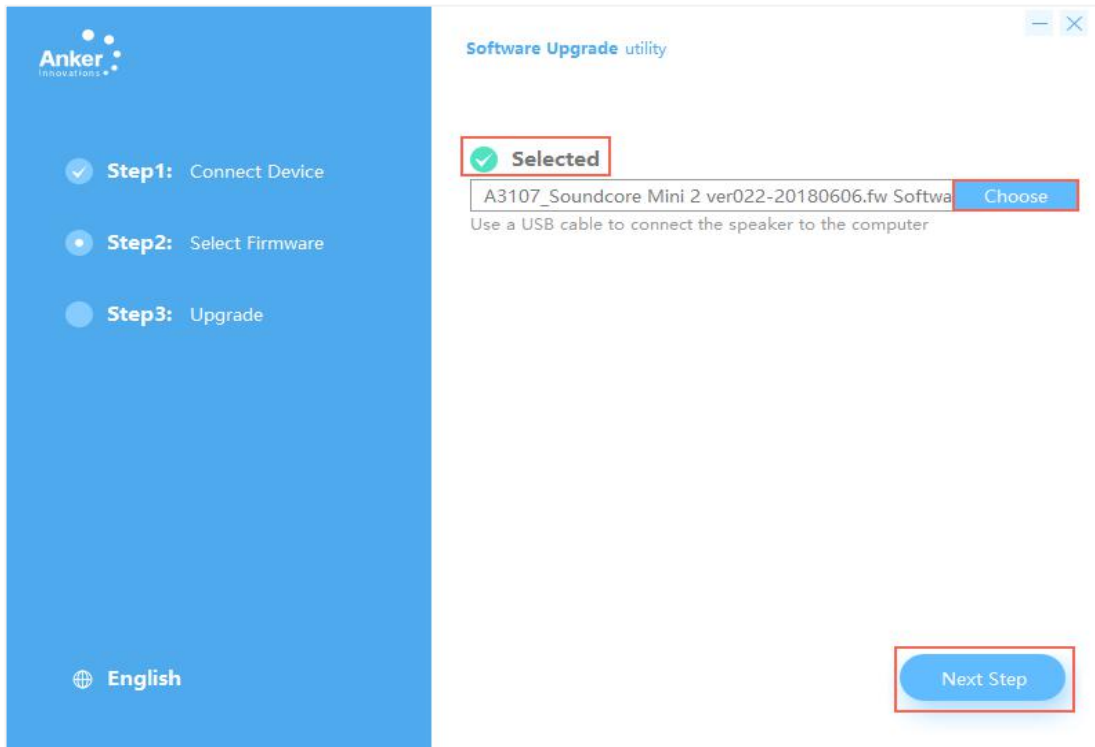

Step 5: When the progress bar is full, the upgrade is successful. Soundcore mini 2 will turn on automatically in a few seconds.

Notes:

- 1) Do not unplug the USB charging cable or press any buttons on the speaker while the upgrade is in progress.
- 2) Hold down the power button for 10 seconds if the speaker seems stuck in the upgrade process.

Anker
Innovations

- ✓ **Step1:** Connect Device
- ✓ **Step2:** Select Firmware
- **Step3:** Upgrade

English

Software Upgrade utility

Upgrading...

(2M) DOWNLOAD LFI ...

Do not disconnect while upgrade is in progress.

Anker
Innovations

- ✓ **Step1:** Connect Device
- ✓ **Step2:** Select Firmware
- ✓ **Step3:** Upgrade

English

Software Upgrade utility

Update Successful

The firmware upgrade was successful.

Finish