


A3162 Soundcore Flare+ Firmware Update Instructions

Step 1: Download the update tool and Soundcore Flare+ firmware.

A) Download the update tool from the Soundcore website, unzip it, then double-click “setup.exe” and follow the default installation instructions.

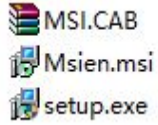


B) Download the firmware for Soundcore Flare+, unzip it, and save it to the desktop.

Step 2: Double-click the “Anker” icon on the desktop.



Windows icon

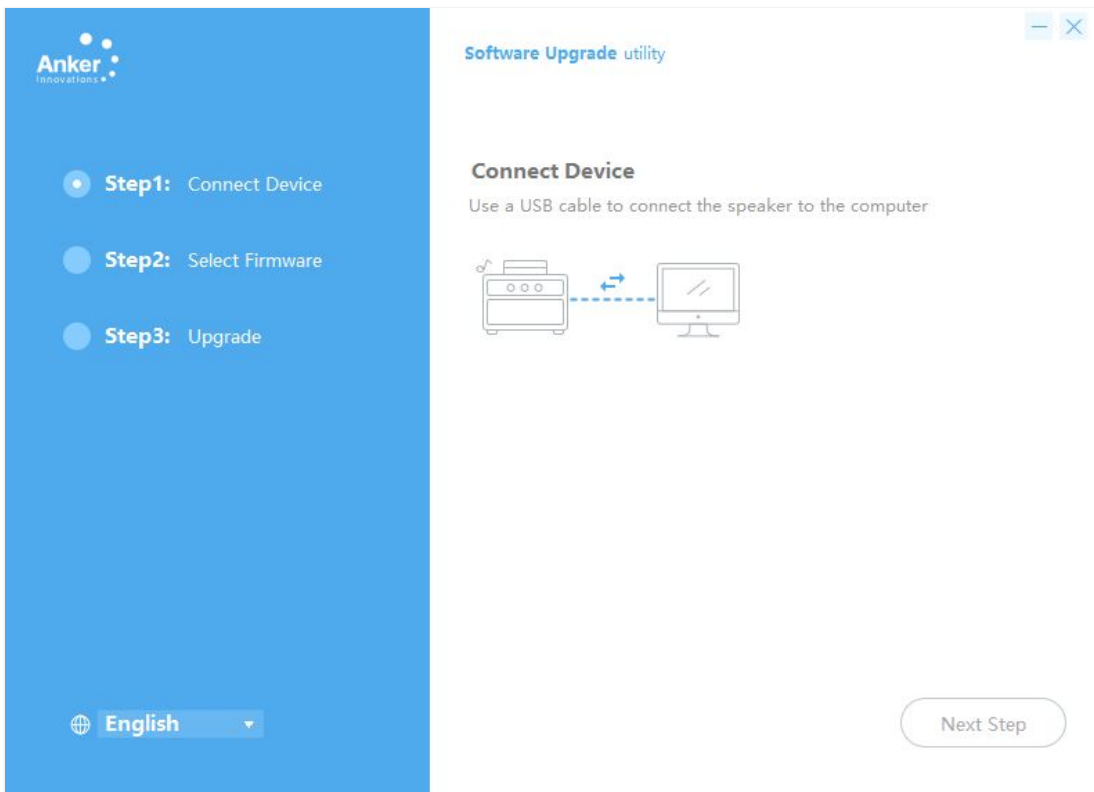

Step 3:


A) Plug the USB charging cable into your computer.

B) Turn off Soundcore Flare+.


C) Press and hold the down the "Volume -" button.

D) Connect the USB charging cable to your Soundcore Flare+.

E) When the update tool interface says "Connected", release the "Volume -" buttons, and click "Next Step."

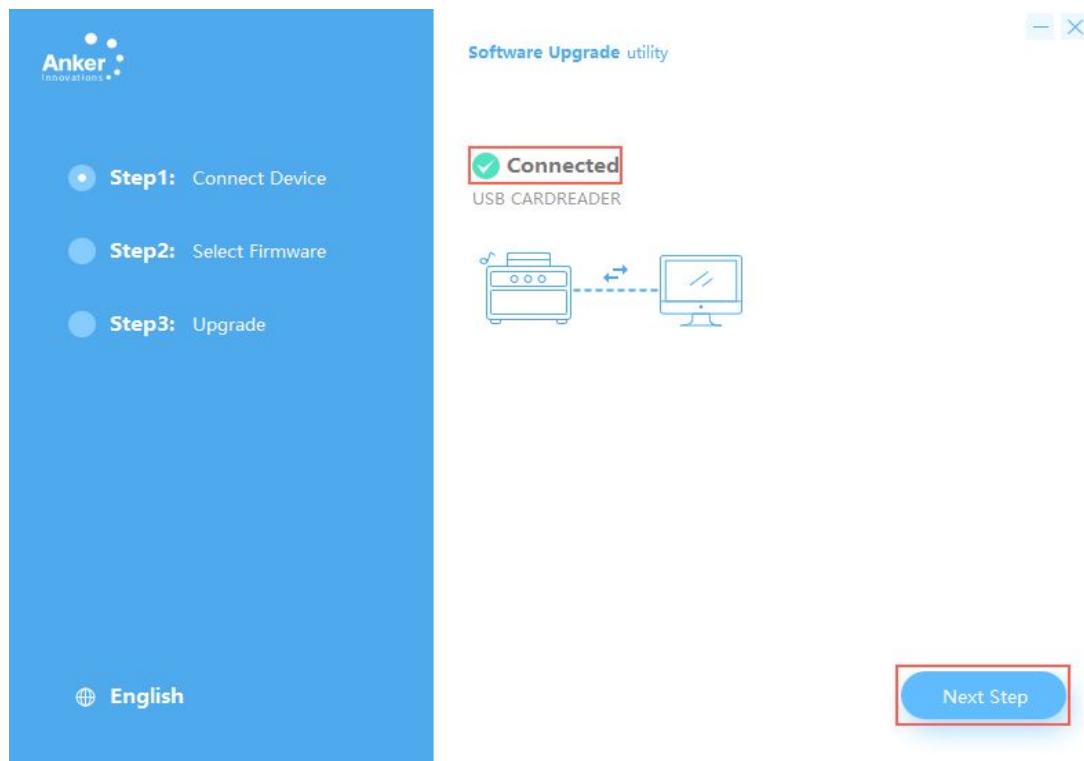

Step 4: Click the “Choose” button and select “A3162_Soundcore Flare+” then click “Next Step.”

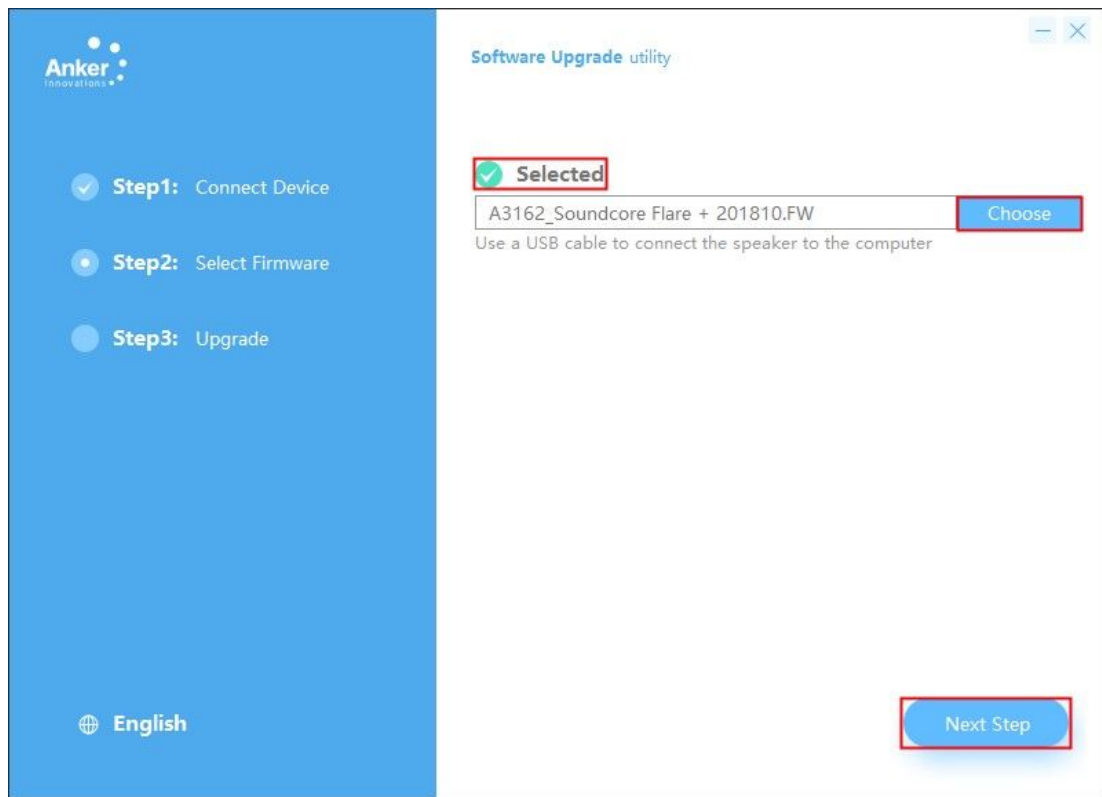

Step 5: When the progress bar is full, the upgrade is successful. Soundcore Flare+ will turn on automatically in a few seconds.

Notes:

- 1) Do not unplug the USB charging cable or press any buttons on the speaker while the upgrade is in progress.
- 2) Hold down the power button for 10 seconds if the speaker seems stuck in the upgrade process.

Anker
Innovations

- ✓ Step1: Connect Device
- ✓ Step2: Select Firmware
- Step3: Upgrade

English

Software Upgrade utility



Upgrading...



(2M) DOWNLOAD LFI ...

Do not disconnect while upgrade is in progress.

Anker
Innovations

- ✓ Step1: Connect Device
- ✓ Step2: Select Firmware
- ✓ Step3: Upgrade

English

Software Upgrade utility



Update Successful

The firmware upgrade was successful.

Finish