

Instruction Manual

Wireless Vertical Mouse

ANKER[®]

Introduction

The Anker vertical ergonomic optical mouse is designed to reduce forearm twisting and the resulting repetitive stress and pain. The vertical "handshake" position encourages a neutral wrist and arm alignment for greater comfort and better health. No finger contortions are needed to operate the easy-to-reach buttons. The thumb rest has been reshaped to provide even more comfort over earlier versions, and two next / last page buttons boost your productivity.

Features

- **Ergonomic** – scientific design encourages healthy neutral wrist and arm positions for smoother movement and less overall strain
- **Wireless** – plug in the nano receiver and free yourself from cables
- **Attractive** – sleek and simple design
- **Responsive** – optical tracking, scroll wheel, and added next / last page buttons help boost your productivity

Package Contents


- 1 Anker Vertical Mouse
- 1 Instruction manual
- 1 2.4G USB receiver

Specifications

Product dimensions	62 x 124 x 68 mm
Product weight	102g
DPI	800 / 1200 / 1600DPI
Working voltage	3V
Working current	10mA
Number of buttons	6 (including the scroll wheel)
Lifelong clicks	1 million
Battery type	2 AAA batteries (not included)
Supported system	Windows 10 / 8 / 7 / Vista / XP / Linux, Mac OS X

Identification of Parts

- ① Scroll Wheel
- ② Left Button
- ③ Right Button
- ④ DPI Switch Button
- ⑤ Next Page Button
- ⑥ Previous Page Button
- ⑦ LED bar

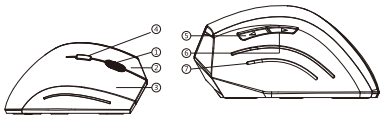

1. **DPI Switch Button:** Press this button to adjust the DPI levels between 800, 1200, and 1600 DPI.
2. **Previous Page:** Press this button to go back to the previous page while web browsing.

3. **Next Page:** Press this button to go to the next page while web browsing.
4. **LED bar:**
 - a. When adjusting DPI to the first level (800 DPI), the red LED bar will blink once; when adjusting to the second level, the red LED bar will blink twice, etc.
 - b. When the battery is running low, the LED bar will turn red and blink every time you move the mouse.

Instructions

1. Insert 2 AAA batteries (not included) into the battery slot.
2. Remove the nano receiver from the bottom of the mouse, and insert it into the computer's USB port. The driver will automatically install.
3. Press any button to activate the mouse.
4. Press the DPI switch to shift to the DPI level appropriate to your environment. (This step is optional.)

Note: The mouse will enter sleep mode after 8 minutes of being idle. Please press any button to activate the mouse again.

Warranty

Our company provides customers with a warranty of **18 MONTHS** from the date of purchase.

Contact Us

For any inquiries or comments concerning our products, please send an email to support@ianker.com and we will respond as soon as possible. If there is a quality related issue with the product, you may request a REPLACEMENT OR REFUND by submitting a request at www.ianker.com/support.

Statement

We're only able to provide after-sales service for purchases made directly from Anker. If you purchased through a different retailer, please contact them for any exchange or refund requests.

ANKER[®]

Tel: 1-800-988-7973(US)

Service time: Mon – Fri 9:00 – 5:00 PST

Tel: 400-0550-036 (CN)

Service time: Mon – Fri 9:00 – 17:30 CST

Email: support@ianker.com

Website: www.ianker.com

SM-A086-V02